


## The Overview

### The Flank Panel- Right Side

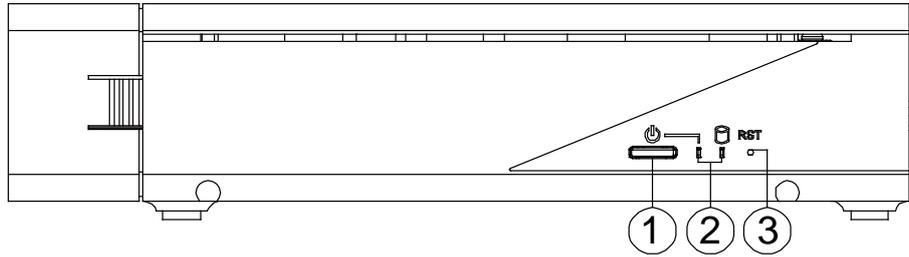


1. Power button.
2. Power & Network LED Indicators:

LED Indicative	Color	Status	Description
Power LED	Red	Solid Light	Booting/ Restart
		Light off	While connected to LAN port
Network LED	Green	Solid Light	While connected to LAN port
		Blinking	While LAN transferring data
		Light off	Not connected to LAN

3. Reset button


Use the end of a paper clip or some other similar object to press and hold the Reset button for at least 10 seconds to restore the factory default settings. If you reset the device, the device will return to factory defaults, you will lose all your settings.

### The Rear Panel

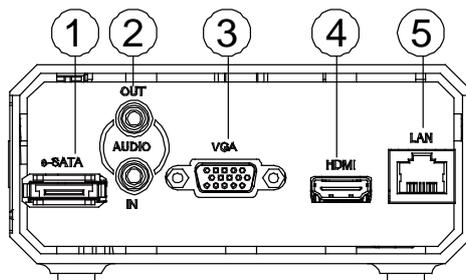

1. e-SATA: The NVR supports an eSATA interface for connecting external storage devices for recording.
2. AUDIO IN/ AUDIO OUT: The audio in connector is used to connect the audio output from a camera or other devices to the NVR. The audio out connector provides the unit's audio signal to a speaker or stereo.
3. VGA interface: Connect to a VGA monitor.
4. HDMI interface: The NVR provides an HDMI interface which can be connected to an HDMI monitor.
5. LAN (ETHERNET 10/100 Connector): This is a standard RJ-45 connector for 10/100 Mbps Ethernet networks.

### The Flank Panel- Left Side

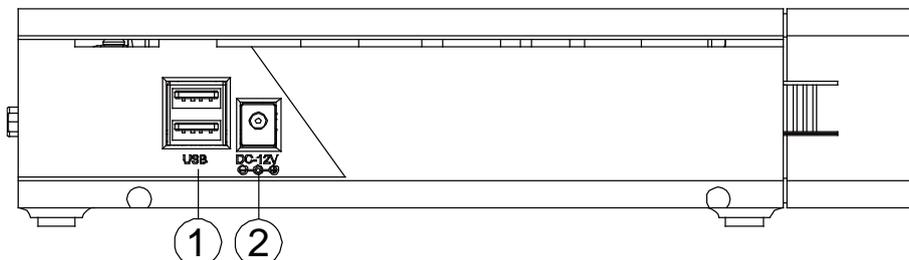

1. USB 2.0 Host x2: Supports mouse, flash disk, or HDD with external power.
2. DC Input: DC12V/ 3.0A (AC Adapter).

**Note**

Q: Can I use an external USB drive for recording?


A: An external USB drive can't be used for recording, but for back up, transferring important videos out from the internal hard drive.

**Hard Disk Installation**


Before installing a hard disk drive (HDD), please make sure the power is disconnected from the NVR. A factory recommended HDD should be used for this installation.

Tools Required: Screwdriver.


1. Remove the cover from the NVR. Then insert the hard disk along the slot until it is placed into the proper position.

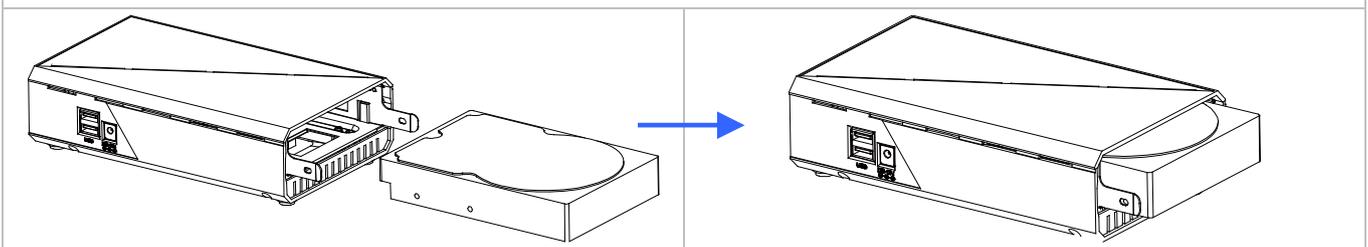

2. Place the HDD on the mounting plate and fix it with 2 screws.

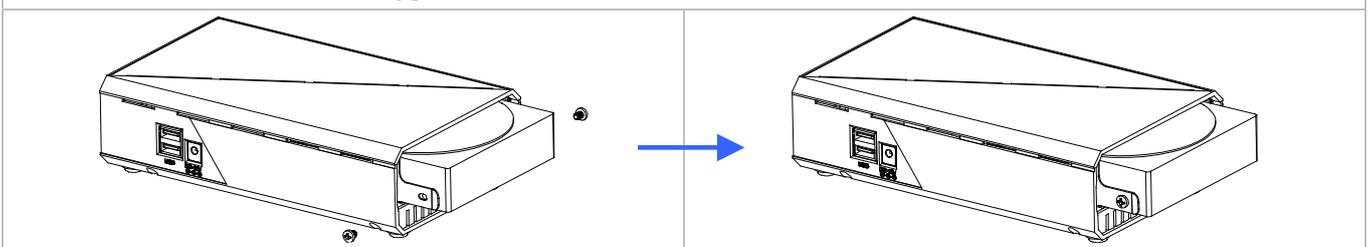

3. After having finished the installation, please replace the front cover.

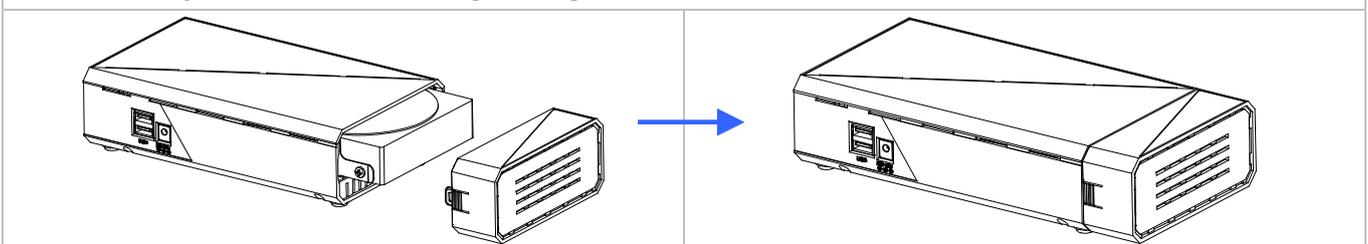

**Hardware Installation**

Please follow the instructions below to set up the system.

**Connecting Devices to the Rear Panel**

1. Connect the main monitor to the Main Monitor via VGA port or HDMI connector.
2. Connect one or more cameras to the LAN.

**Connecting a mouse**

3. Connect a mouse to the USB port at the rear panel.

**Basic Operations**

**Power on**

Connect the power supply then press the power button on the right side of the NVR.

**Login the System**


After the program is started, a pop-up window will appear to verify user account. Enter the default username and password. In the Log on dialog, select 'admin' and input the default password '9999'.



## Add a camera/ channel to the system

To add a channel to the NVR:


1. Click the  (Search) button to enter into the Camera List mode.
2. In the **Camera List** mode, please click the  (Search) button to discover the connection of the all-type device in the LAN. The **Search List** will display the connection of the all-type devices.
3. Fill in the camera information then click the  (Search) button.

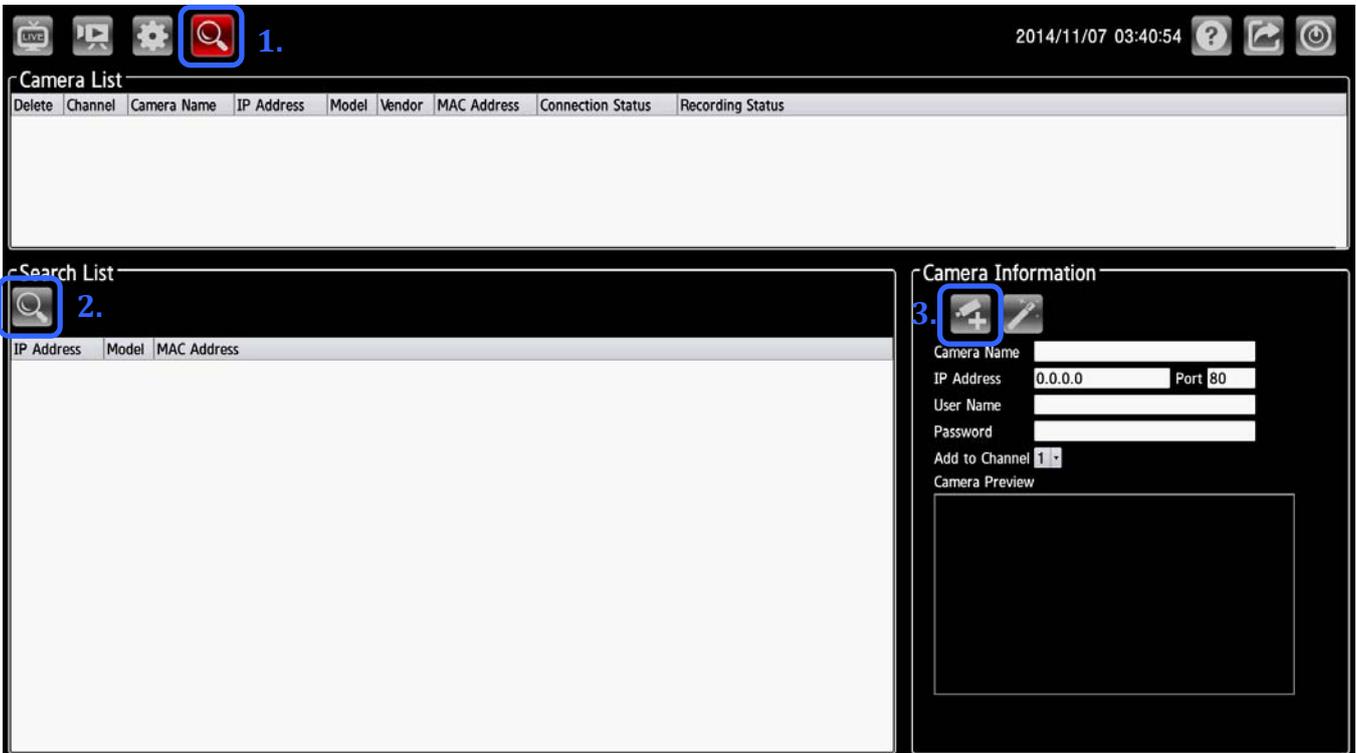

The screenshot shows the NVR web interface. At the top, there is a navigation bar with icons for LIVE, Camera, Settings, and Search. The Search icon is highlighted with a red box and labeled '1.'. Below the navigation bar is the 'Camera List' section, which is currently empty. Below the 'Camera List' section is the 'Search List' section, which is also empty. The Search icon in the Search List section is highlighted with a red box and labeled '2.'. To the right of the Search List section is the 'Camera Information' section, which contains fields for Camera Name, IP Address (0.0.0.0), Port (80), User Name, Password, and Add to Channel. The Add icon in the Camera Information section is highlighted with a red box and labeled '3.'. The top right corner of the interface shows the date and time: 2014/11/07 03:40:54.

## Power Off

Click the  (Shut down) button and the system will power off.

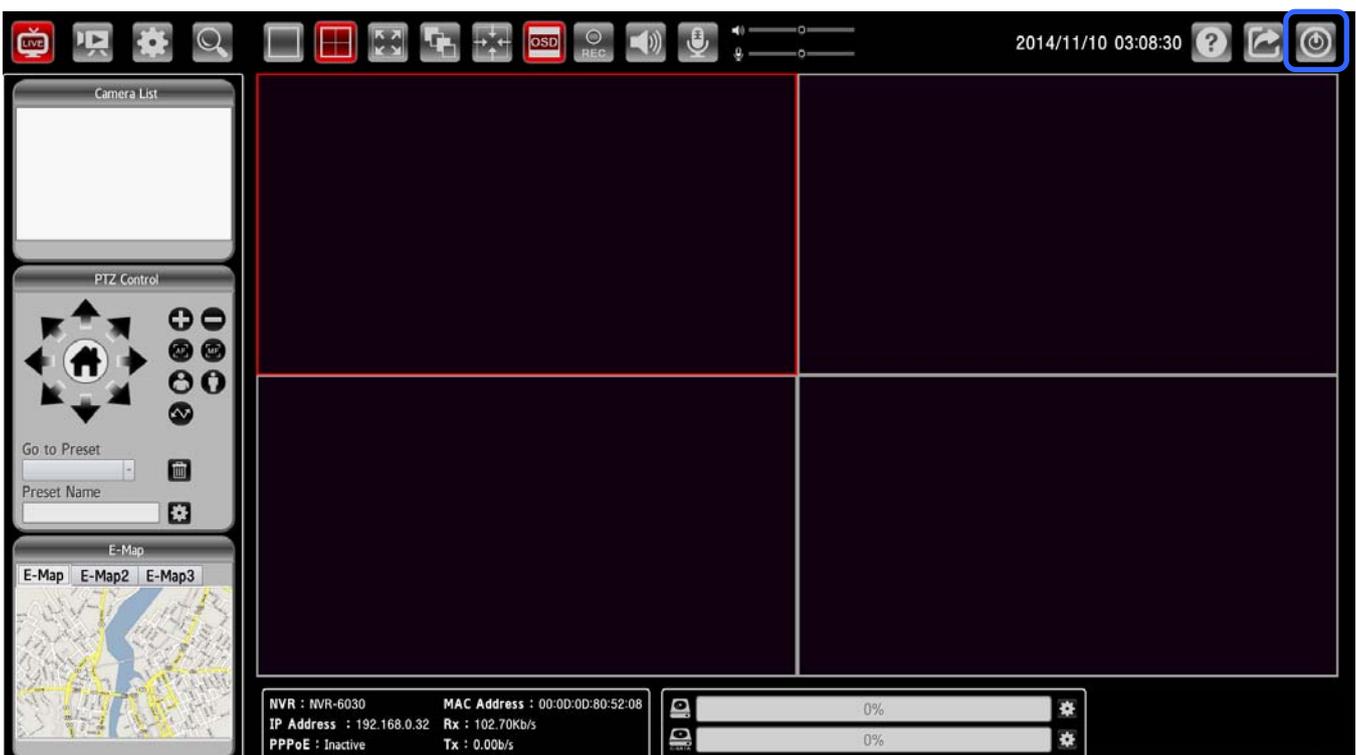

The screenshot shows the NVR web interface. At the top, there is a navigation bar with icons for LIVE, Camera, Settings, Search, and Power Off. The Power Off icon is highlighted with a red box. Below the navigation bar is the main interface area, which is currently empty. The bottom of the interface shows a status bar with the following information: NVR : NVR-6030, MAC Address : 00:0D:0D:80:52:08, IP Address : 192.168.0.32, Rx : 102.70Kb/s, PPPoE : Inactive, Tx : 0.00b/s. The top right corner of the interface shows the date and time: 2014/11/10 03:08:30.