 


The Overview

The Flank Panel- Right Side

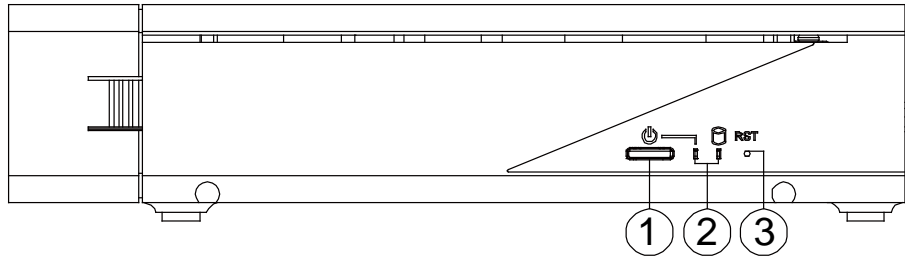


1. Power button.
2. Power & Network LED Indicators:

LED Indicative	Color	Status	Description
Power LED	Red	Solid Light	Booting/ Restart
		Light off	While connected to LAN port
Network LED	Green	Solid Light	While connected to LAN port
		Blinking	While LAN transferring data
		Light off	Not connected to LAN

3. Reset button


Use the end of a paper clip or some other similar object to press and hold the Reset button for at least 10 seconds to restore the factory default settings. If you reset the device, the device will return to factory defaults, you will lose all your settings.

 The Rear Panel

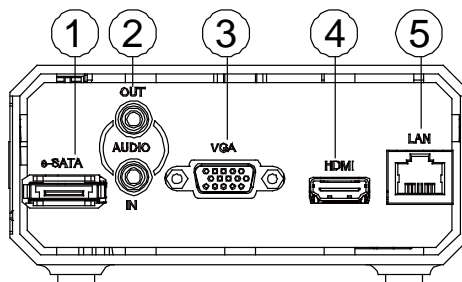

1. e-SATA: The NVR supports an eSATA interface for connecting external storage devices for recording.
2. AUDIO IN/ AUDIO OUT: The audio in connector is used to connect the audio output from a camera or other devices to the NVR. The audio out connector provides the unit's audio signal to a speaker or stereo.
3. VGA interface: Connect to a VGA monitor.
4. HDMI interface: The NVR provides an HDMI interface which can be connected to an HDMI monitor.
5. LAN (ETHERNET 10/100 Connector): This is a standard RJ-45 connector for 10/100 Mbps Ethernet networks.

 The Flank Panel- Left Side

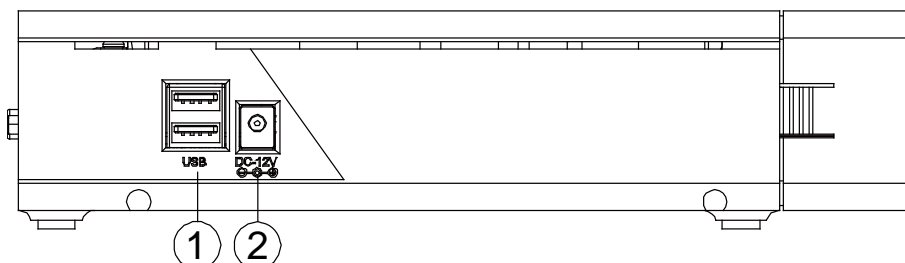

1. USB 2.0 Host x2: Supports mouse, flash disk, or HDD with external power.
2. DC Input: DC12V/ 3.0A (AC Adapter).

Note

Q: Can I use an external USB drive for recording?

 
A: An external USB drive can't be used for recording, but for back up, transferring important videos out from the internal hard drive.

Hard Disk Installation


Before installing a hard disk drive (HDD), please make sure the power is disconnected from the NVR. A factory recommended HDD should be used for this installation.

Tools Required: Screwdriver.


1. Remove the cover from the NVR. Then insert the hard disk along the slot until it is placed into the proper position.

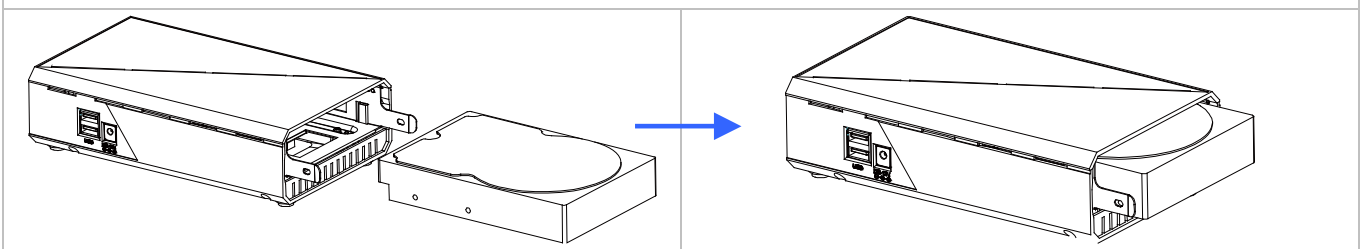

 2. Place the HDD on the mounting plate and fix it with 2 screws.

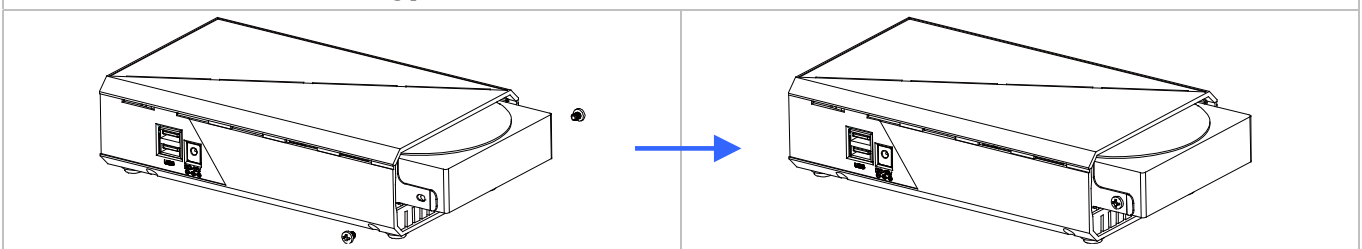

 3. After having finished the installation, please replace the front cover.

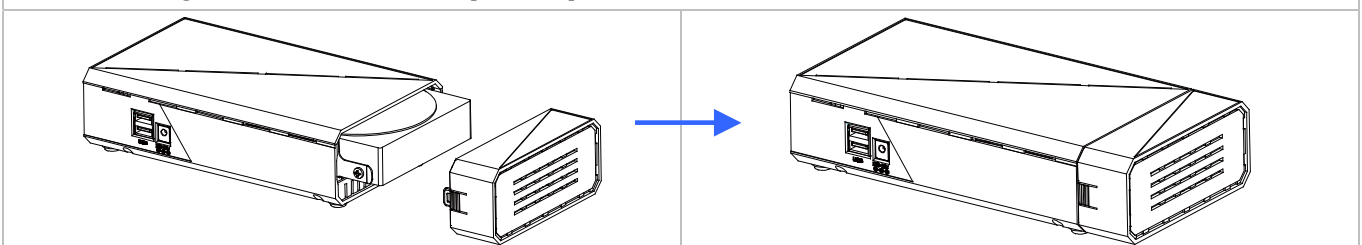

Hardware Installation

Please follow the instructions below to set up the system.

Connecting Devices to the Rear Panel

1. Connect the main monitor to the Main Monitor via VGA port or HDMI connector.
2. Connect one or more cameras to the LAN.

Connecting a mouse

3. Connect a mouse to the USB port at the rear panel.

 
Basic Operations

Power on

Connect the power supply then press the power button on the right side of the NVR.




Login the System

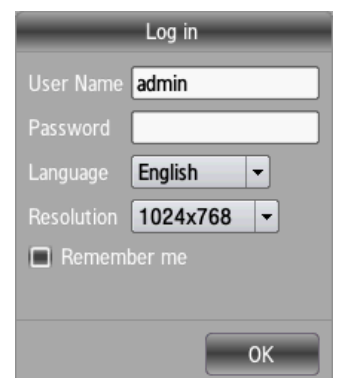
After the program is started, a pop-up window will appear to verify user account. Enter the default username and password. In the Log on dialog, select 'admin' and input the default password '9999'.



Add a camera/ channel to the system

To add a channel to the NVR:


1. Click the  (Search) button to enter into the Camera List mode.
2. In the **Camera List** mode, please click the  (Search) button to discover the connection of the all-type device in the LAN. The **Search List** will display the connection of the all-type devices.
3. Fill in the camera information then click the  (Search) button.

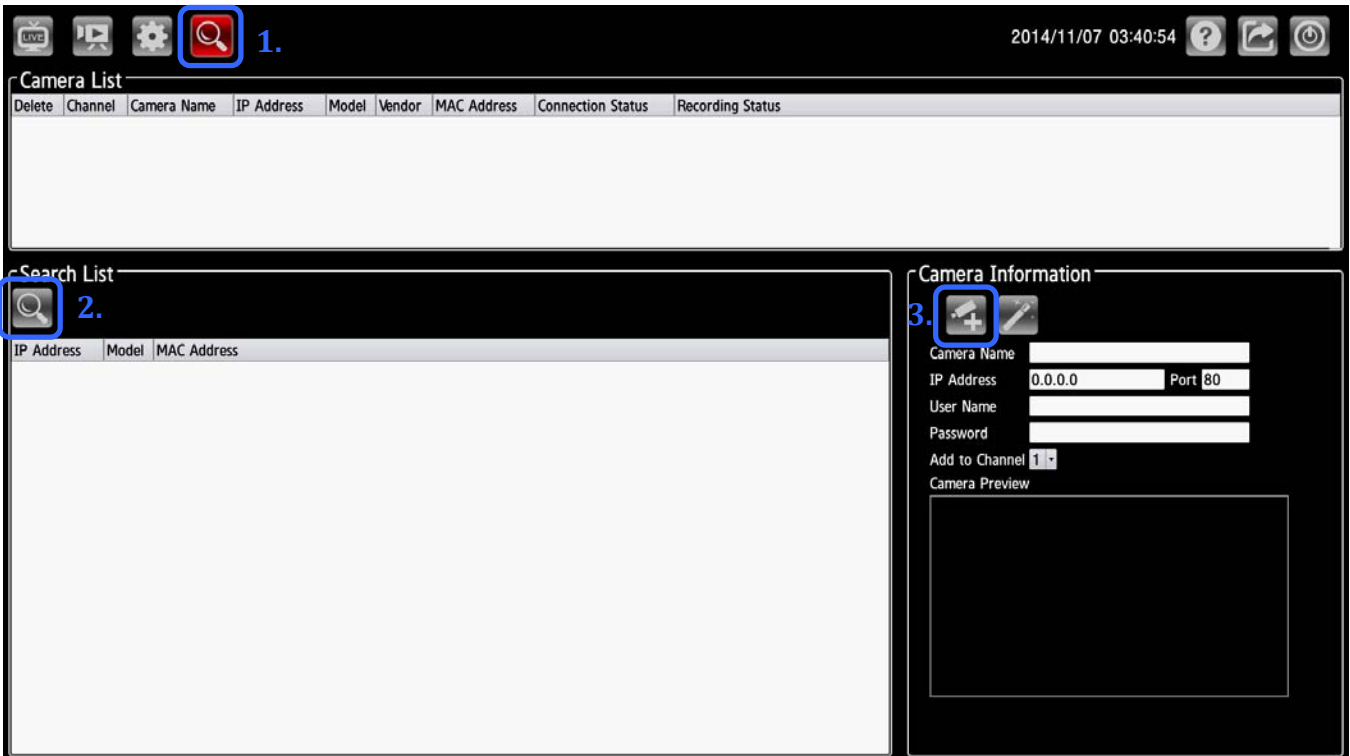

The screenshot shows the NVR web interface. At the top, there is a navigation bar with icons for LIVE, Playback, Settings, Search, and a power button. The main area is divided into three sections: 'Camera List' at the top, 'Search List' on the left, and 'Camera Information' on the right. The 'Camera List' section has a table with columns: Delete, Channel, Camera Name, IP Address, Model, Vendor, MAC Address, Connection Status, and Recording Status. The 'Search List' section has a table with columns: IP Address, Model, and MAC Address. The 'Camera Information' section has fields for Camera Name, IP Address (0.0.0.0), Port (80), User Name, Password, and Add to Channel (1). A red box highlights the Search icon in the top navigation bar, labeled '1.'. Another red box highlights the Search icon in the Search List section, labeled '2.'. A third red box highlights the Add icon in the Camera Information section, labeled '3.'. The date and time '2014/11/07 03:40:54' are displayed in the top right corner.

Power Off

Click the  (Shut down) button and the system will power off.

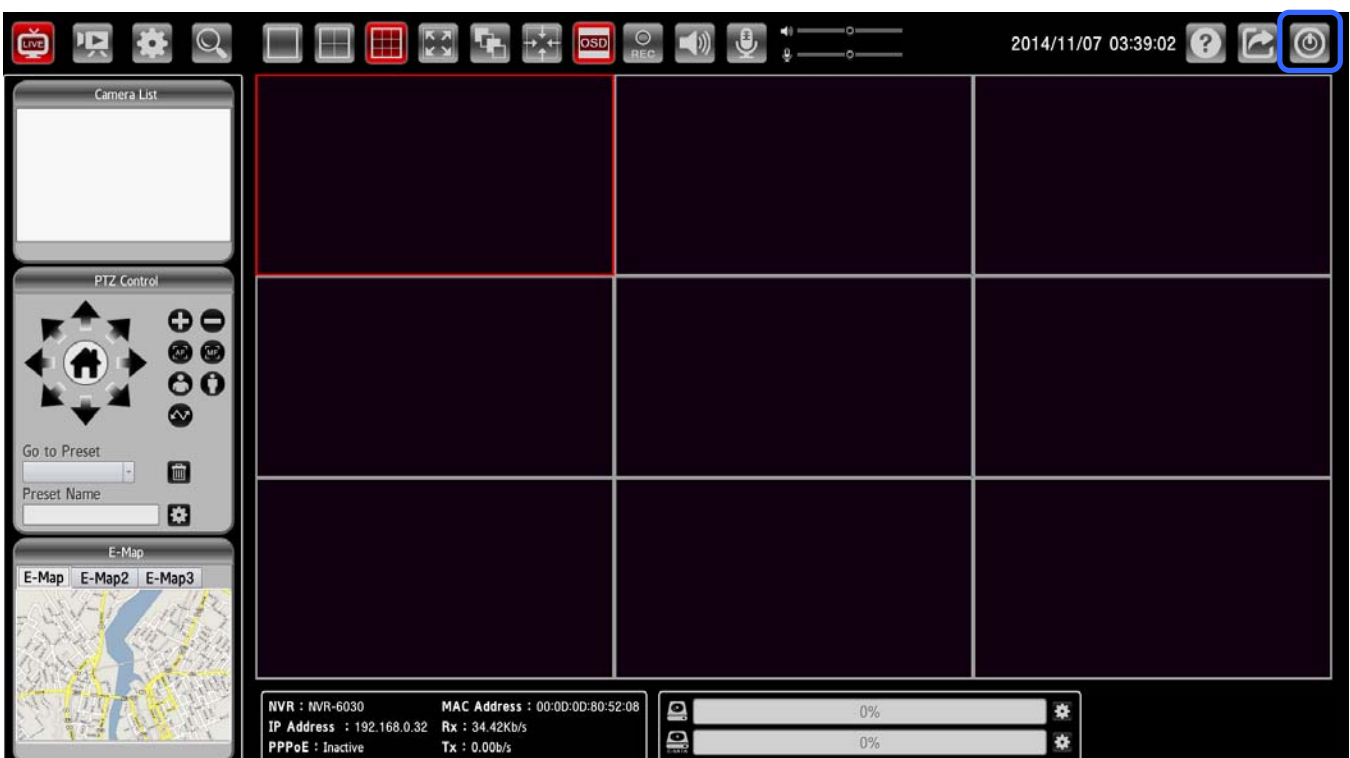

The screenshot shows the NVR web interface with a dark background. The top navigation bar includes icons for LIVE, Playback, Settings, Search, and a power button. The main area is divided into several sections: 'Camera List' on the left, 'PTZ Control' in the middle-left, 'E-Map' at the bottom-left, and a large grid of camera preview windows in the center. The 'Camera List' section is empty. The 'PTZ Control' section has a directional pad and buttons for zoom, pan, and preset. The 'E-Map' section shows a map with yellow lines. The bottom status bar displays system information: NVR : NVR-6030, MAC Address : 00:0D:0D:80:52:08, IP Address : 192.168.0.32, Rx : 34.42Kb/s, PPPoE : Inactive, Tx : 0.00b/s. A red box highlights the power button in the top navigation bar. The date and time '2014/11/07 03:39:02' are displayed in the top right corner.